

# C30 Multipurpose descaler

## Acid Descaler

Effectively removes encrustations and scale from washing appliances and boilers of any professional equipment.

The regular use of **C30 Multipurpose descaler** keeps the equipment always efficient, while slowing down the natural wear and tear.



## Application

Professional kitchens, cafeterias, bars, restaurants, canteens, commercial catering kitchens

Suitable for professional dishwashers, ovens, pasta cookers, bain marie etc.



## Description

**C30 Multipurpose descaler** is a liquid acid descaler for the complete removal of limescale. The perfect balance between acid and detergent activities allows to deeply clean even the most hidden components of equipments (nozzles, filters, coils, boilers, etc.).

Thanks to its low foaming power, **C30 Multipurpose descaler** is recommended for cleaning boilers and equipments with an automatic descaling device.

The neutral fragrance makes its use more pleasant.

**This product is the result of thorough testing in the Electrolux Professional laboratories.**

**C30 Multipurpose descaler** is the best solution for sparkling clean and high-performance appliances.



Scan the QR code to view the safety data sheet

## C30 Multipurpose descaler

### Chemical-physical characteristics

<b>Form</b>	Clear Liquid
<b>Colour</b>	Red
<b>Odour</b>	Faint Characteristic
<b>Specific weight</b>	1.250 g/ml
<b>Water solubility</b>	Complete in all ratios
<b>pH</b>	<1
<b>Acidity (H<sub>3</sub>PO<sub>4</sub>)</b>	Around 38% (weight percentage)



### Instruction for use

**DISHWASHERS:** Empty the dishwasher's tank and fill it with clean water.

Add 0.5 – 1L of **C30 Multipurpose descaler** every 10 L of water inside the dishwasher's tank. Switch-off the appliance and wait all night. To clean spray arms, take them apart and soak in a solution with the same concentration as before; leave all night.

On the morning, after switching-off the detergent dosing pump and reassembling spray arms, proceed with 2/3 short cycles to allow all hidden components to be perfectly descaled.

Reconnect the detergent dosing pump and proceed with a standard washing cycle.

**BAIN MARIE AND PASTA COOKERS:** Depending on the limescale grade, proceed with a dilution in warm water with a concentration between 3% and 10% of **C30 Multipurpose descaler**. Switch on the appliance and ensure at least 15 minutes of boiling then switch-off and leave all night in soaking. At morning, empty the tank, rinse and wash with a generic detergent.

**OVENS WITH BOILER:** follow ovens' instructions for use

**Foaming power:** none

### Package:

2 x 5L cans

### Code:

0S2362

### Warnings:

- the product is for professional use only; do not use in domestic appliances.
- use protective goggles and chemical-resistant gloves (refer to SDS for more details)
- transport and storage must be done only in the original package, upright position.
- do not expose to sunlight and freezing temperatures.
- do not transfer in other bottles or mix with other products.
- to be used within 30 months after the production date.
- the package and containers are totally recyclable.
- please handle the emptied material according to the local recycling regulation.